

Solatube® HSE Fixed Skylight


Installation Instructions

Parts List		
1	HSE Skylight*	(1)
	Fasteners	
	a. Flashing Screws - #10 X 2 in (51 mm) (Order Separately)	(8)
2	b. Flashing Screws - #10 X 3 in (76 mm) (Order Separately)	(8)
	c. Rubber Foam Self-Stick Insulating Weather Seal $3/4$ " Wide x $7/16$ " Thick (Not Provided)	
	d. Snap Spacer (Order Separately)	

Required Tools:

Hammer	
Flat Bar	
Utility Knife	
Tape Measure	
Screw Gun with Phillips Head	
Glass Suction Cup	
Required Safety Equipment	

* High Velocity Hurricane Zones: This product is not rated for High Velocity Hurricane Zones.

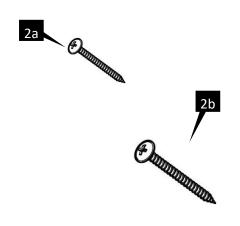








SOLATUBE. Innovation in Daylighting...

Solatube® HSE Operable Skylight


Installation Instructions

Parts	List	Quantity
1	HSE Fixed Skylight Top*	(1)
2	Operable Flash	(4)
3	Skylight Screen	(1)
4	Extrusion Skylight Operable	(1)
5	Solar Panel Assembly with Rain Sensor (Rain Sensor Not Shown)	(1)
	Fasteners	
	a. Flashing Screws - #10 X 2 in (51 mm) (Order Separately)	(8)
	b. Flashing Screws - #10 X 3 in (76 mm) (Order Separately)	(8)
	c. Rivet, Stainless Steel 1/8" X 5/16"	(12)
6	d. Screw, Stainless Steel #8 X 1/2" Self-Tapping (Black)	(24)
	e. Chain Connector Assembly	(1)
	f. Clevis Pin	(1)
	g. Snap Spacer (Order Separately)	
	h. Cable Clip	(1)
7	Skylight Remote Control	(1)
8	b. Rubber Foam Self-Stick Insulating Weather Seal 3/4" Wide x 7/16" Thick (Not Provided)	

 


Rivet Gun
Screw Gun with Phillips Head
Glass Suction Cup
Drill Bit
Utility Knife
Tape Measure
Flat Bar
Hammer
Required Safety Equipment

* High Velocity Hurricane Zones: This product is not rated for High **Velocity Hurricane Zones.**

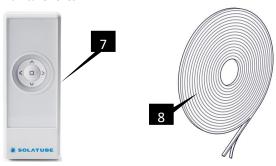



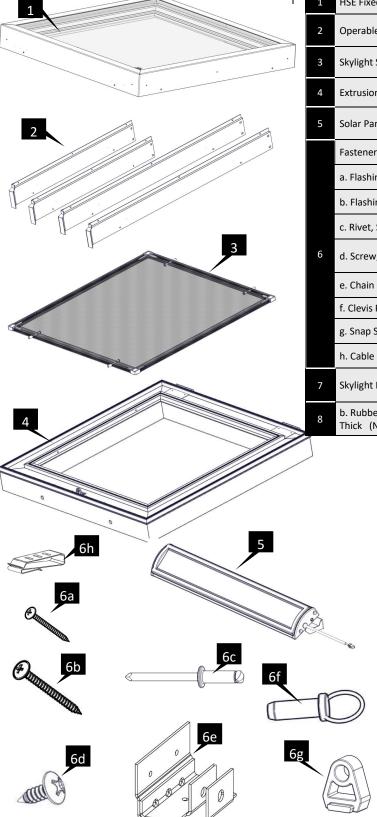

For the most current Installation Instructions, please visit www.solatube.com/instructions Solatube International, Inc. | 2210 Oak Ridge Way | Vista, CA 92081-8341 | www.solatube.com | T: 888.SOLATUBE

2





Do not proceed with the installation until you have read the entire instructions, including these warnings. Use of materials or methods not authorized by Solatube International will result in an invalid warranty.

Solatube International, Inc. (seller) assumes no responsibility or obligation whatsoever for the failure of an architect, contractor, installer, or building owner to comply with all applicable laws, ordinances, building codes, electrical codes, energy codes, fire and safety codes and requirements, roof warranties and adequate safety precautions. Installation of this product should be attempted only by individuals skilled in the use of the tools and equipment necessary for installation. Protect yourself and all persons and property during installation. If you have any doubt concerning your competence or expertise, consult a qualified expert before proceeding.



Install at your own risk!


Solatube product installations may be dangerous and include the potential for death, personal injury and property damage. The hazardous conditions include but are not limited to the following:

- Use extreme caution when working around the roof opening to prevent falling and personal injury.
- The weight of skylights varies, therefore transportation and installation of the skylight to the installation location should be conducted with as many people as necessary to avoid accidents. Ensure proper lifting techniques are used at all times.
- Solatube products may have sharp edges. Always wear leather or canvas gloves while handling and installing products.
- Solatube product installations require climbing and working at dangerous heights, including on ladders, scaffolding, roofs and in attic spaces. Risk of death, personal injury and property damage may result from a fall, or from falling objects. Use extreme caution to minimize risk of accidental injury, including, but not limited to the following procedures:
 - Clear area below your work space of all people, animals and other items.
 - Avoid working on surfaces that are slippery or wet.
 - Use foot-wear with excellent traction.
 - Use only strong, well supported ladders.
 - Work only in calm dry weather.
 - If attic work is necessary, ensure that your weight is supported at all times with structurally sound framing; drywall material is not designed to carry a person's weight.
- To reduce the risk of fire, electric shock, and personal injury, basic safety precautions should always be followed when using electric tools, including always wearing safety goggles or other suitable eye protection, and ensuring work area is clear of all electrical wires, gas pipes, water pipes, and other obstacles.
- When working in the attic or other dusty areas, use of a mask or respirator is recommended to avoid lung irritation. Attic spaces may be dark, confined, and subject to extreme temperatures. Beware of sharp protruding objects. Do not attempt installation without having someone within range of your voice or close enough to come to your aid if necessary.
- Solatube products are not designed to withstand the weight of a person, tools or other objects. Walking or placing objects on the system could cause personal injury and property damage. If the product is damaged, the structural capacity may be weakened; therefore the system should be repaired immediately. For safe installation and use, do not deviate from these installation instructions.
- Please note that interior surfaces and finishes in older homes may have been painted with lead-based paint. Removal of the skylight could disrupt the paint. Use proper precautions to minimize the exposure of dust and debris when removing and installing skylights.
 For more information of proper removal of lead paint please visit www.epa.gov/lead.
- Ensure roof curb and water proofing is in good condition before installing skylights. If curb and or water proofing is compromised, it will be necessary to repair or replace. All roof work and repairs should be conducted by individuals skilled in roofing practices or a licensed roofer.


Part No. 952620 v1.4

Solatube HSE Fixed Skylight Installation Instructions The following steps are for installation of a Solatube HSE Fixed Skylight.

See page 8 for Solatube HSE Operable Skylight Installation Instruction.

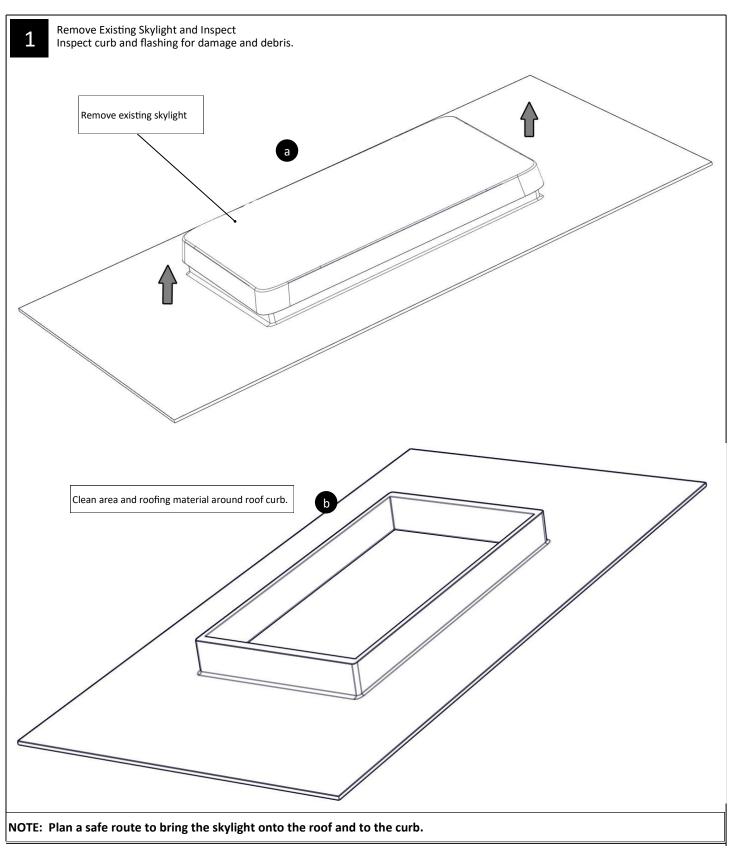


For the most current Installation Instructions, please visit www.solatube.com/instructions Solatube International, Inc. | 2210 Oak Ridge Way | Vista, CA 92081-8341 | www.solatube.com | T: 888.SOLATUBE

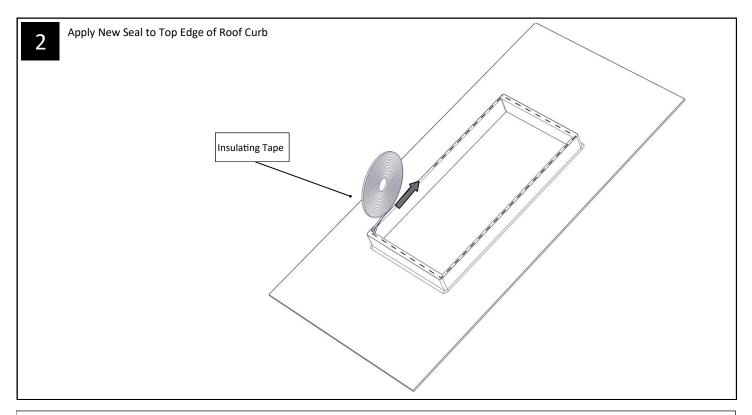



A

Caution: The weight of skylights varies, therefore transportation and installation of the skylight to the installation location should be conducted with as many people as necessary, or utilize lift assisting tools such as hoists to avoid accidents. Ensure proper lifting techniques are used at all times.

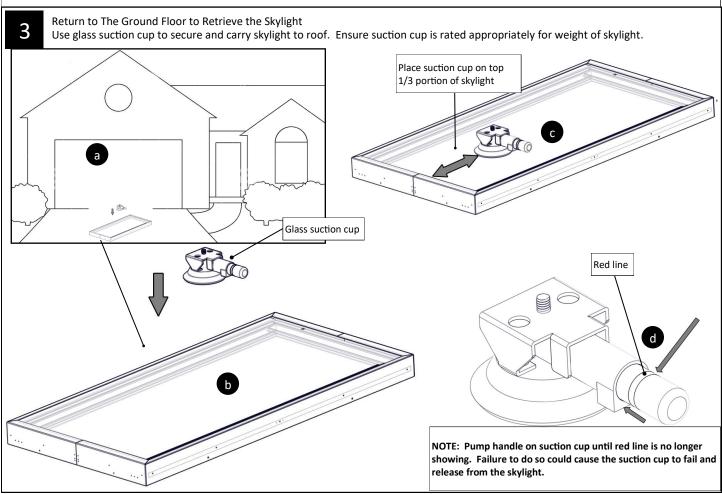


For the most current Installation Instructions, please visit www.solatube.com/instructions Solatube International, Inc. | 2210 Oak Ridge Way | Vista, CA 92081-8341 | www.solatube.com | T: 888.SOLATUBE

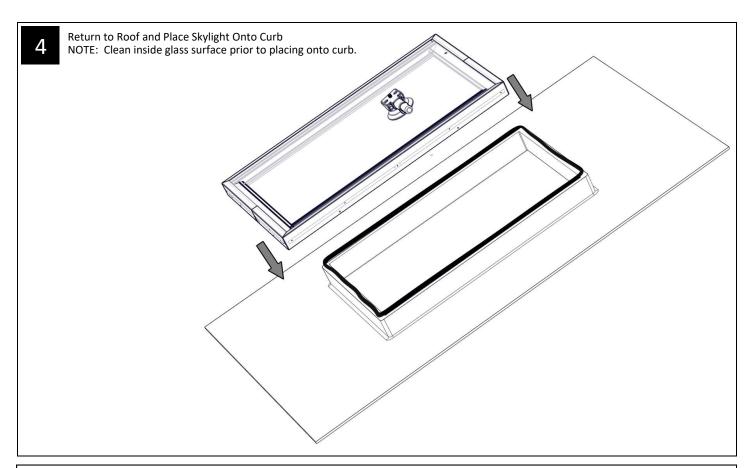

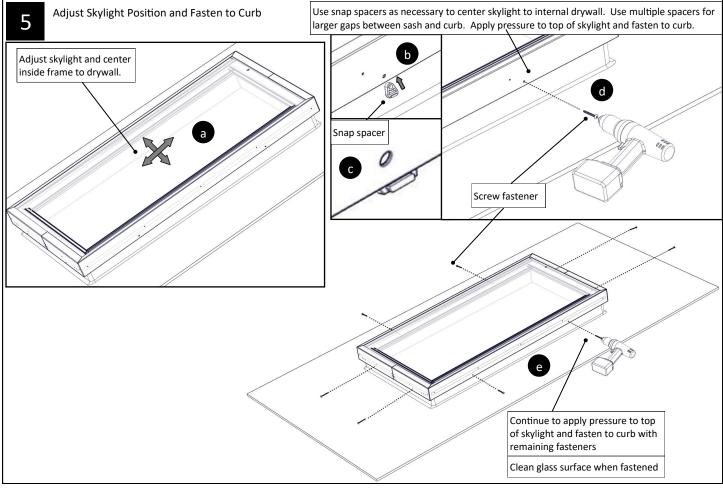

For the most current Installation Instructions, please visit www.solatube.com/instructions
Solatube International, Inc. | 2210 Oak Ridge Way | Vista, CA 92081-8341 | www.solatube.com | T: 888.SOLATUBE

6

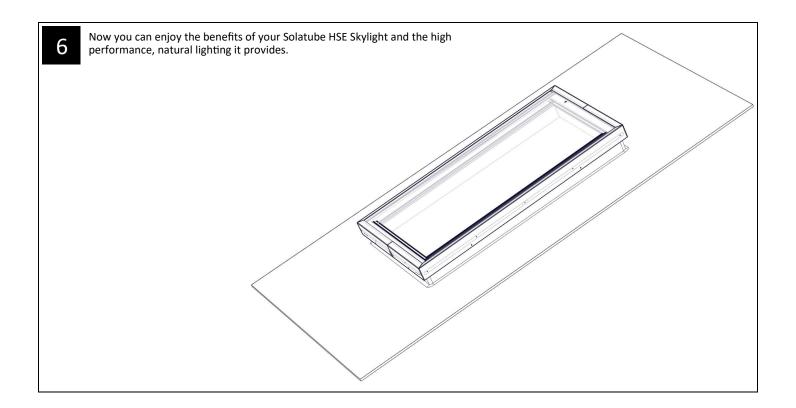

1 R

Remove Existing Skylight
Inspect curb and flashing for damage and debris. Clean all debris from curb and roof area around skylight opening.
Apply new seal to top edge of roof curb.



Remove All Packaging from Operable Base and Lay Out All Components










For the most current Installation Instructions, please visit www.solatube.com/instructions
Solatube International, Inc. | 2210 Oak Ridge Way | Vista, CA 92081-8341 | www.solatube.com | T: 888.SOLATUBE

© 2021 Solatube International, Inc.

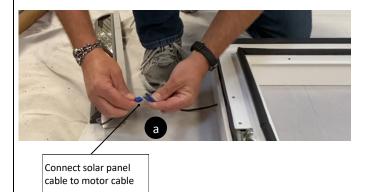


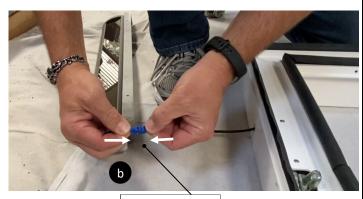

Snap cables together

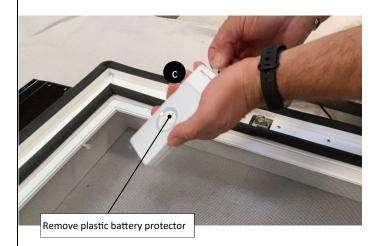



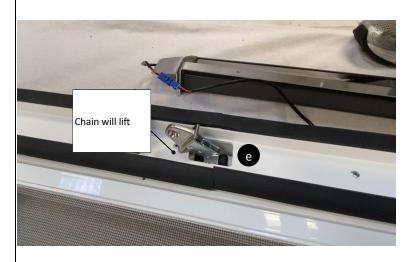




home position.

If motor does not operate, see pairing section on page 21.

NOTE: If motor does not operate see pairing instruction on page 21.

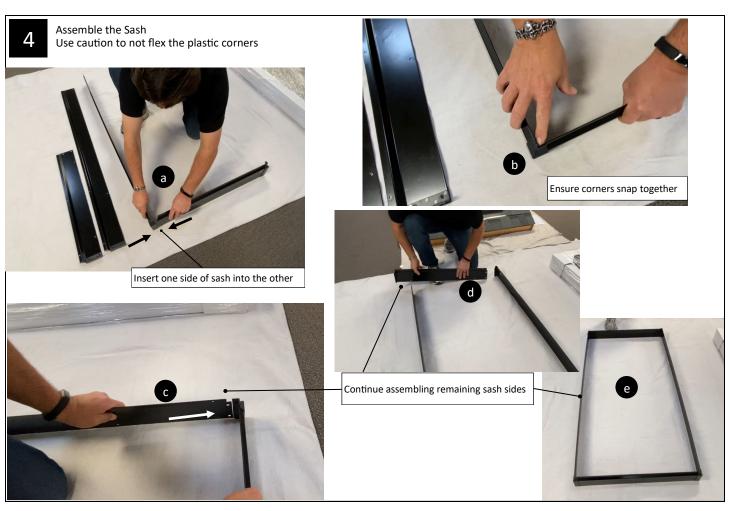




For the most current Installation Instructions, please visit www.solatube.com/instructions Solatube International, Inc. | 2210 Oak Ridge Way | Vista, CA 92081-8341 | www.solatube.com | T: 888.SOLATUBE

10



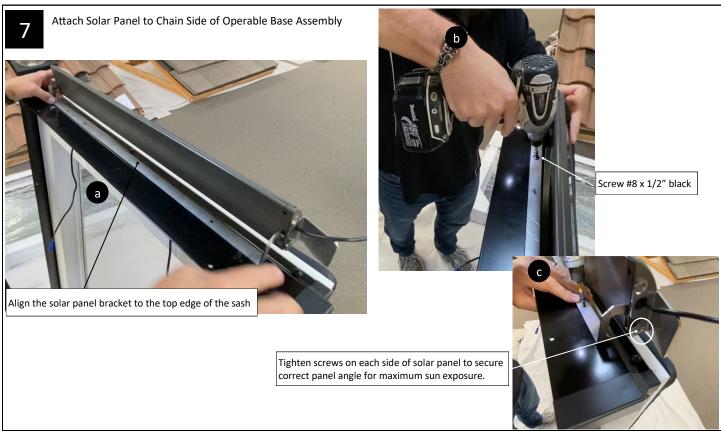


For the most current Installation Instructions, please visit www.solatube.com/instructions Solatube International, Inc. | 2210 Oak Ridge Way | Vista, CA 92081-8341 | www.solatube.com | T: 888.SOLATUBE

8


12


Place Operable Base Assembly on Curb and Align Inside Edges with Drywall Shaft.

 $oldsymbol{\Lambda}$ Use the safest method to carry the operable base assembly to the roof.

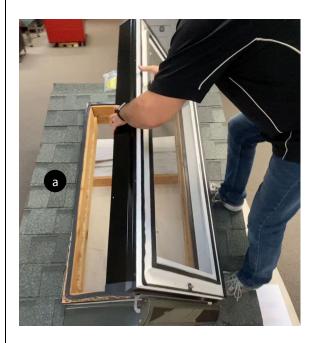



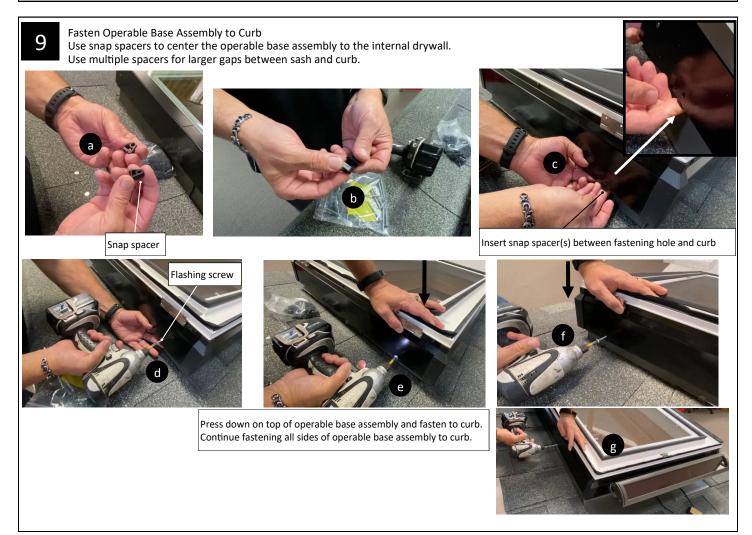


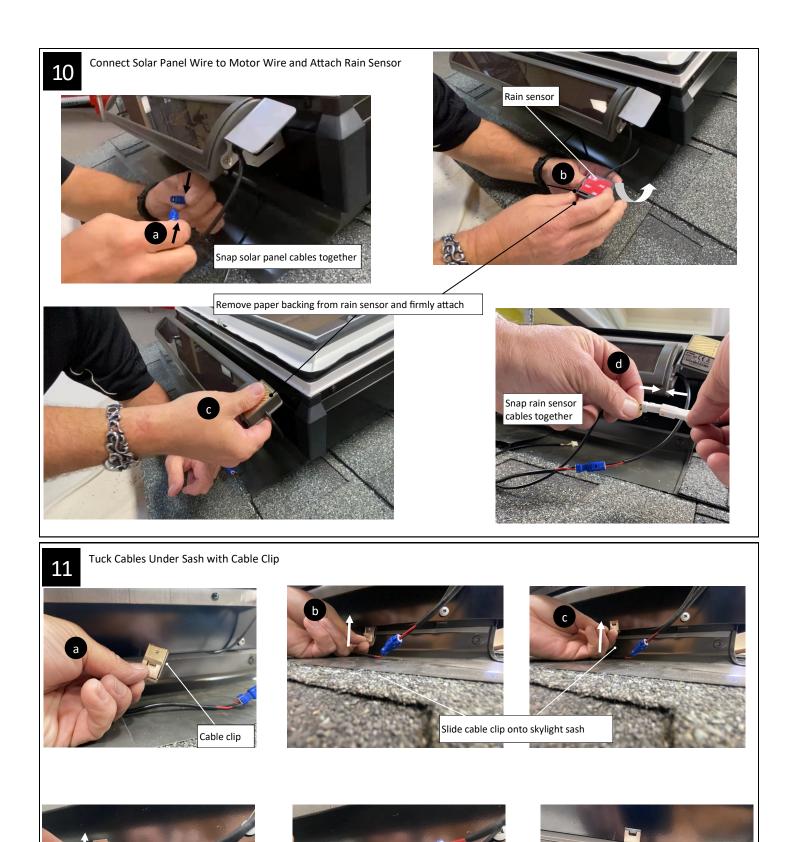


For the most current Installation Instructions, please visit www.solatube.com/instructions Solatube International, Inc. | 2210 Oak Ridge Way | Vista, CA 92081-8341 | www.solatube.com | T: 888.SOLATUBE


Press cables up to secure to cable clip


Cables secured to cable clip

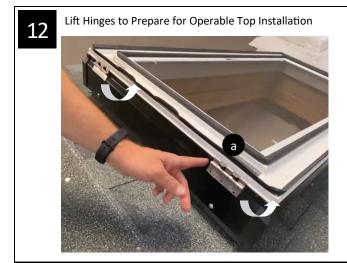

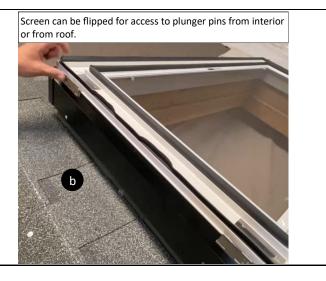




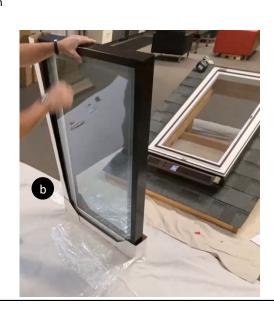


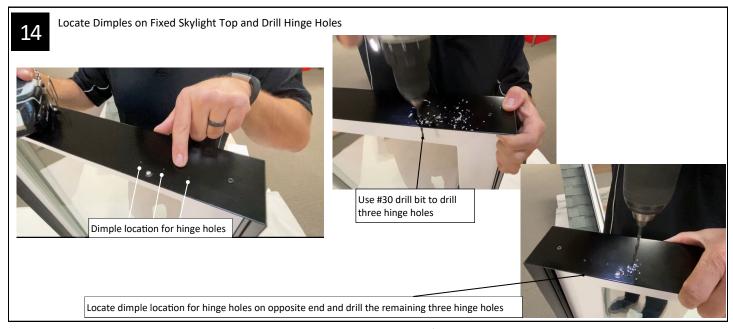

For the most current Installation Instructions, please visit www.solatube.com/instructions
Solatube International, Inc. | 2210 Oak Ridge Way | Vista, CA 92081-8341 | www.solatube.com | T: 888.SOLATUBE

14

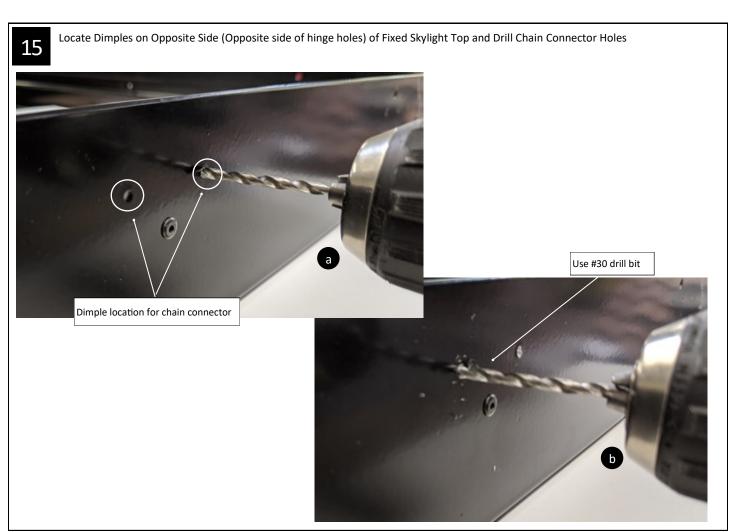


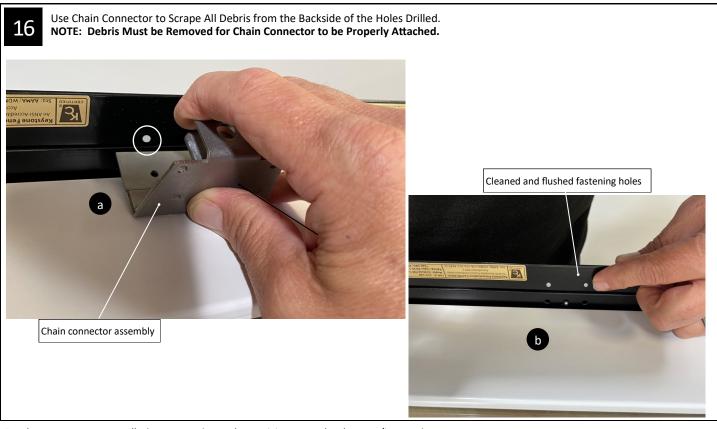

For the most current Installation Instructions, please visit www.solatube.com/instructions Solatube International, Inc. | 2210 Oak Ridge Way | Vista, CA 92081-8341 | www.solatube.com | T: 888.SOLATUBE


15




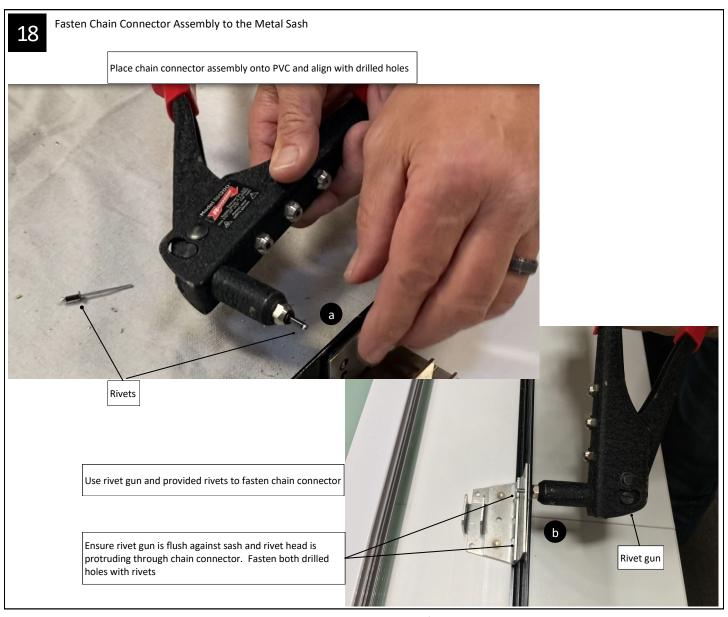


For the most current Installation Instructions, please visit www.solatube.com/instructions
Solatube International, Inc. | 2210 Oak Ridge Way | Vista, CA 92081-8341 | www.solatube.com | T: 888.SOLATUBE

16

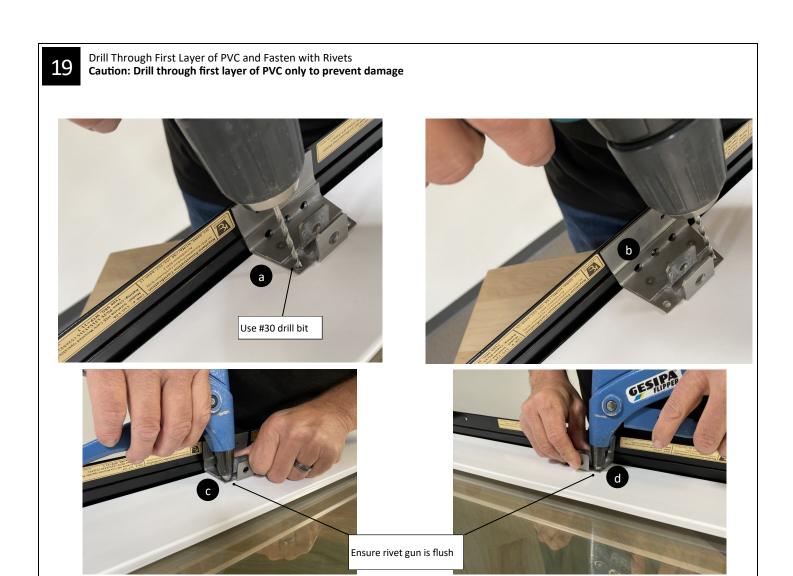

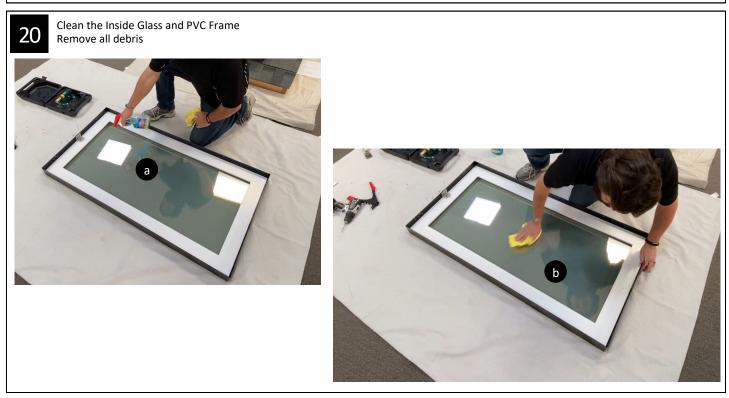


For the most current Installation Instructions, please visit www.solatube.com/instructions Solatube International, Inc. | 2210 Oak Ridge Way | Vista, CA 92081-8341 | www.solatube.com | T: 888.SOLATUBE

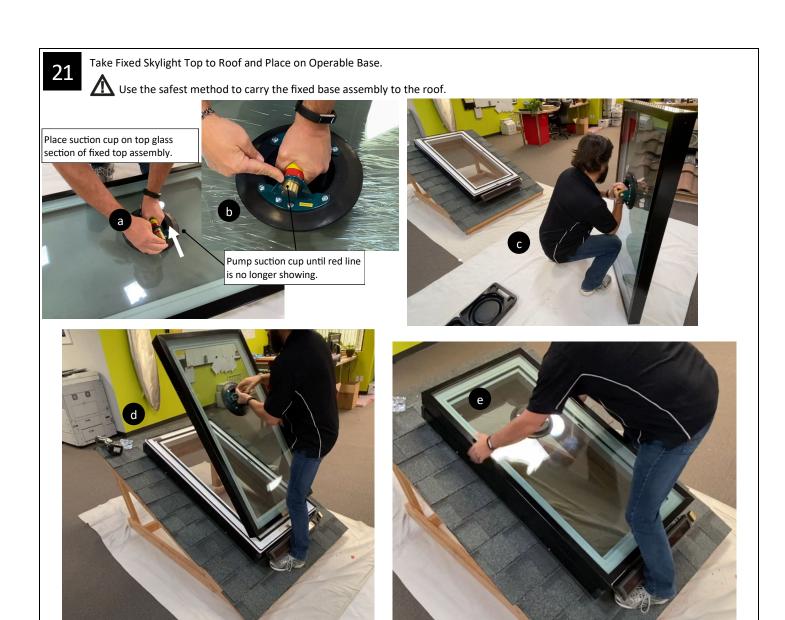




For the most current Installation Instructions, please visit www.solatube.com/instructions
Solatube International, Inc. | 2210 Oak Ridge Way | Vista, CA 92081-8341 | www.solatube.com | T: 888.SOLATUBE

18

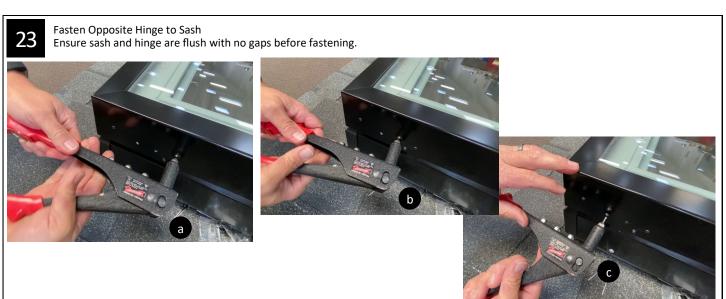

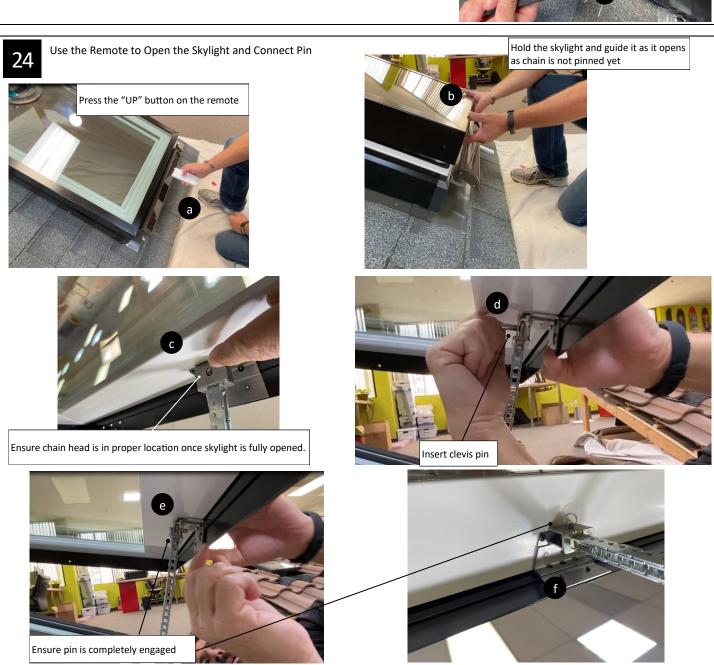

For the most current Installation Instructions, please visit www.solatube.com/instructions Solatube International, Inc. | 2210 Oak Ridge Way | Vista, CA 92081-8341 | www.solatube.com | T: 888.SOLATUBE











Installation Complete
You can now enjoy the benefits of your Solatube HSE Operable Skylight and the high performance, natural daylight it provides.



20


Optional StepThese instructions are intended to be used to pair multiple Solatube HSE Operable Skylights to one remote control, or pair a new remote.

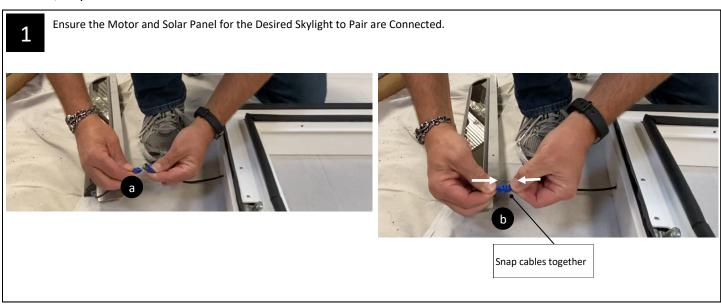

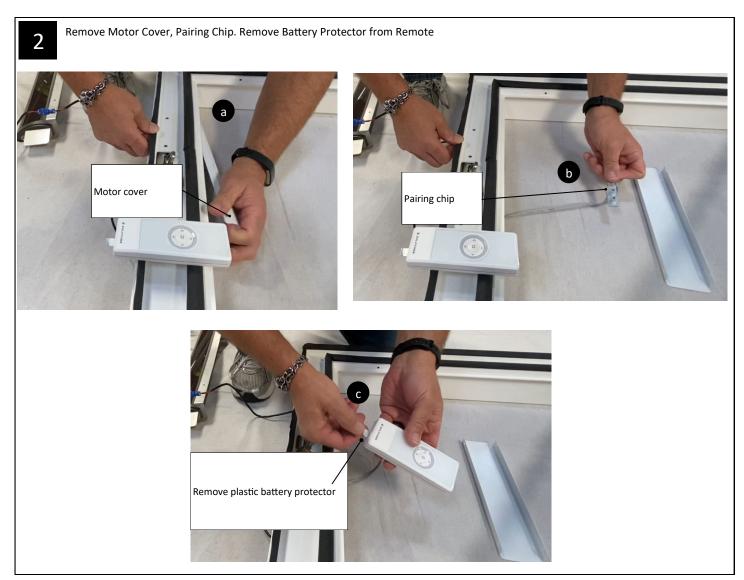

For the most current Installation Instructions, please visit www.solatube.com/instructions Solatube International, Inc. | 2210 Oak Ridge Way | Vista, CA 92081-8341 | www.solatube.com | T: 888.SOLATUBE

Optional Step—ContinuedThese instructions are intended to be used to pair multiple Solatube HSE Operable Skylights to one remote control, or pair a new remote.

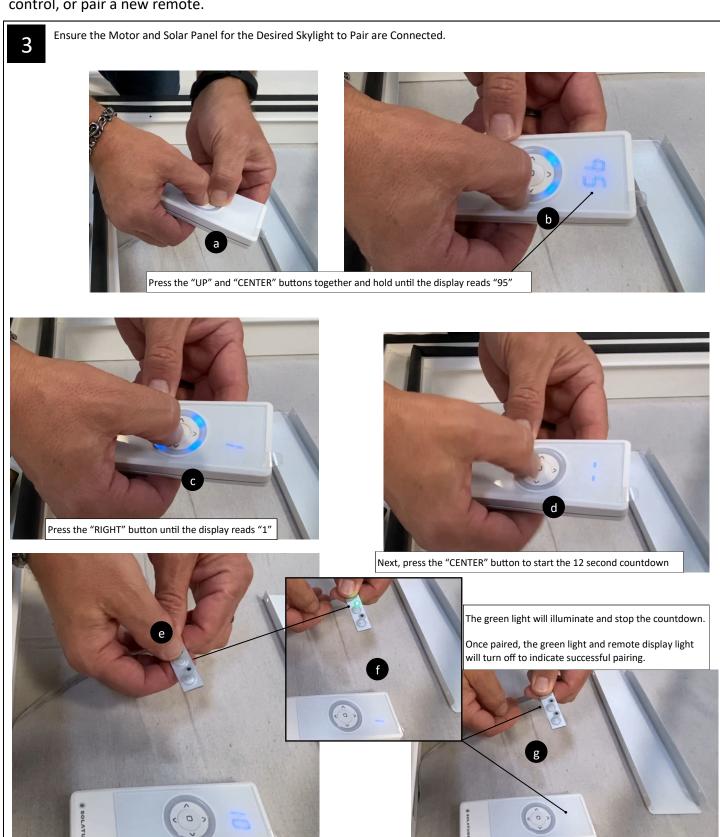

For the most current Installation Instructions, please visit www.solatube.com/instructions Solatube International, Inc. | 2210 Oak Ridge Way | Vista, CA 92081-8341 | www.solatube.com | T: 888.SOLATUBE

Set remote down and press the "P" button on the pairing chip to pair

remote with motor during the 12 second countdown.

22

Optional Step—ContinuedThese instructions are intended to be used to pair multiple Solatube HSE Operable Skylights to one remote control or pair a new remote.




Adjust Chain if Necessary for Chain to Function Properly





Test for Successful Pairing

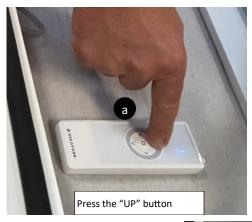





Press the "DOWN" button. Chain will go down.

Pairing Complete

For further Remote Control instructions please see the Solatube Remote Control User Manual.

Notes

